5886944
K-Tripod Lamp

Parts List

A.	Legs	3 pcs
B.	Base Assembly	1 pc
C.	Harp	1 pc
D.	Shade	1 pc
E	Finial	1 pc

* Please make sure that you have all the parts indicated above before you begin assembly of this item.
* This item may require periodic tightening**.**
* This item is to be assembled by an adult and is not intended to be taken apart by a child

Assembly Instructions

1. **Attach Legs (A) to Base Assembly (B)** Insert pre-threaded ends of Legs (A) into pre-drilled holes in Base Assembly (B). Secure by turning in a clockwise direction. See Illustration**.**
2. **Attach Harp (C)** Place the Harp (C) onto the Base Assembly (B).
3. **Attach Shade (D)** Place Shade (D) onto the Harp (C) secure with Finial (E). See Illustration.

Use maximum 60W maximum Type A bulb (not included). Clean with soft, dry cloth – do not use polish or cleaners.

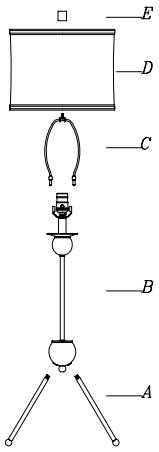

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.